

HORIZONTAL INSTALLATION

Important before installation


- Before Dupont™ Plantex® RootProtector can be unrolled, the surface should be free of sharp objects
- Minimize the number of seams to maximize root protection
- Avoid damage and creasing
- If you are uncertain about the installation or the environment, you should always consult a (tree) expert
- Avoid moving vehicles over the excavated trench

Install Dupont™ Plantex® in the following way

- Unroll Dupont™ Plantex® RootProtector in the excavated trench or ditch
- At the end of a roll, the splice / overlap with the next roll should be at least 50 cm long
- Join the Dupont™ Plantex® RootProtector together with butyltape or with RootBarrier 1-component glue (yellow)
- Splicing should be executed cleanly and with great precision; inaccuracy may lead to weeds growing through
- Refill the trench and compact the soil by press or vibration plate

Join Dupont™ Plantex® RootProtector with butyl tape

- Make sure the Dupont™ Plantex® RootProtector is clean and dry
- Fold back both ends of Dupont™ Plantex® RootProtector
- Join the Dupont™ Plantex® RootProtector together in three places, as indicated in the picture
- Press the ends together firmly

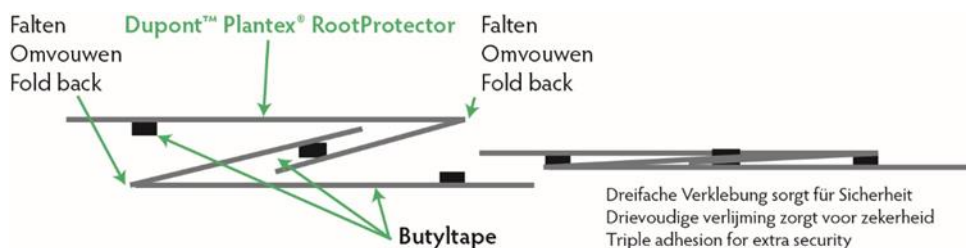

*only tested on tree roots